

Flow Rate Calculations Made Using the Models 8384/84A/8385/85A/8386/86A VELOCICALC[®] Plus Air Velocity Meters

Application Note TI-127

The Models 8384/8384A/8385/8385A/8386/8386A VELOCICALC[®] Plus Air Velocity Meters are able to calculate the flow rate based on several different methods. This Application Note is designed to help the user better understand how those calculations are made.

Calculation of Flow Rate Using Velocity and Duct Size

The VELOCICALC[®] Plus models listed above can calculate flow rate from velocity and duct size. This type of flow rate calculation applies to any measurement that occurs in a duct or pipe. Velocity is measured by the VELOCICALC[®] Plus meters using the hot wire sensor in the permanently attached probe or by a Pitot tube that is attached to the pressure ports. The size of the duct or pipe (area is calculated by the instrument) must be entered into the instrument. For a circular pipe or duct, the diameter must be entered (either cm or inches) and for a rectangular duct, both the x and y dimensions need to be entered. The equations the VELOCICALC[®] Plus meter uses for this flow rate calculation are as follows:

$$\text{Circular Area} = A = \frac{\pi(d)^2}{4}$$

$$\text{Rectangular Area} = A = (x)(y)$$

$$\text{Flowrate} = (v)(A)$$

where:

A = area

d = diameter of duct

x = horizontal dimension of duct

y = vertical dimension of duct

v = velocity

Example

You are making a flow measurement in a duct that is 1.5 feet tall and 2 feet wide. Assume that the velocity in the duct is 2500 ft/min.

To make this measurement, press the FLOWRATE key to enter flow rate mode. Enter the shape of the duct (rectangular) and the dimensions of the duct (x size = 1.5 ft or 18 inches, y size = 2 ft or 24 inches). The instrument automatically calculates the flow rate as follows:

$$\text{Rectangular Area} = (1.5 \text{ ft})(2 \text{ ft}) = 3 \text{ ft}^2$$


$$\text{Flow Rate} = (2500 \text{ ft} / \text{min})(3 \text{ ft}^2) = 7500 \text{ ft}^3 / \text{min}$$

Calculation of Flow Rate Using Horns

To use the VELOCICALC[®] Plus meter to measure flow rate from horns only specific horns can be used. The models are Alnor[®] AM 300, AM 600, AM 900, and AM 1200. The reason that only these specific models can be used is that each horn is different and will give varying results. The VELOCICALC[®] Plus meter has only been tested and programmed with data corresponding to the particular model numbers.

When measuring flow rate using the horn method, the VELOCICALC[®] Plus meter measures the velocity and multiplies the reading by a factor that is preprogrammed into the meter. These factors are approximations of a curve and will introduce some error. The typical error is between 3 to 6% when using the VELOCICALC[®] Plus meter and the horns properly. This amount of error is an acceptable limit according to standard practices. The amount of error can easily be greater if the VELOCICALC[®] Plus meter probe is not properly placed in the horn.

The figure is a representation of the curve approximations. We have broken the curve into three sections and then created factors for each section of that curve. These factors are then programmed into the instrument to give flow rate readings.

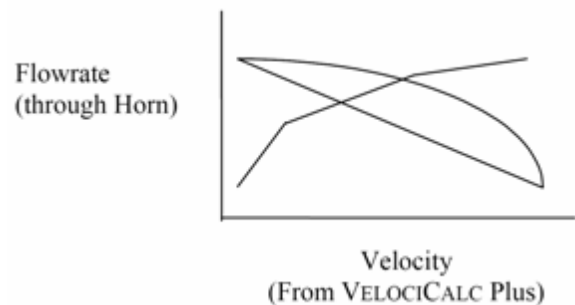

Calculation of Flow Rate Using Differential Pressure and a K Factor

The VELOCICALC[®] Plus meter models listed above can calculate flow rate from the square root of differential pressure and a K factor. This type of flow rate calculation applies to measurements made on diffusers or flow stations with pressure taps designed for this purpose. Differential pressure is measured by the VELOCICALC[®] Plus meter using the pressure ports. The K factor must be entered into the instrument. The equations for this flow rate calculation is as follows:

$$\text{Flowrate} = (\sqrt{p})(K_f)$$

where:

p = differential pressure

K_f = K factor

The source of the K factor for this type of measurement is the manufacturer of the diffuser or flow station. These manufacturers specify the K factor that must be used when making flow measurements using the pressure taps. Several K factors are usually supplied, depending on the pressure and flow rate measurement units that are being used.

NOTE: The DIP switches on the VELOCICALC[®] Plus meter must be set so the pressure and flow rate units match the units of the K factor supplied by the manufacturer.

NOTE: TSI does not provide K factors for this measurement. The K factors must come from the manufacturers of the diffusers or flow stations through which the flow is being measured.

Example

You are making a flow measurement using a diffuser with pressure taps. The manufacturer of the diffuser specified the K factors listed in the table below.

Manufacturer-Supplied K Factors

K factor	Pressure Units	Flow Units
112.3	inches H ₂ O	ft ³ /min
3.36	Pa	l/s
139.5	mm Hg	m ³ /hr

To make this measurement, first make sure the DIP switches are set to the correct units. Press the FLOWRATE key to enter flow rate mode. Enter the flow rate mode (select the K_f symbol on the display) and then the K factor (112.3 or 3.36 or 139.5, depending on the pressure and flow rate units). The instrument automatically calculates the flow rate.

If the differential pressure measurement was 0.876 inches H₂O and the K factor entered was 112.3, the flow rate displayed by the instrument would be:

$$\text{Flowrate} = (\sqrt{0.876})(112.3) = 105.1 \text{ ft}^3 / \text{min}$$

If the differential pressure measurement was 218 Pa (0.218 kPa) and the K factor entered was 3.36, the flow rate displayed by the instrument would be:

$$\text{Flowrate} = (\sqrt{218})(3.36) = 49.6 \text{ l/s}$$

If the differential pressure measurement was 1.64 mm Hg and the K factor entered was 139.5, the flow rate displayed by the instrument would be:

$$\text{Flowrate} = (\sqrt{1.64})(139.5) = 178.6 \text{ m}^3 / \text{hr}$$

TSI Incorporated – 500 Cardigan Road, Shoreview, MN 55126 U.S.A

USA Tel: +1 800 874 2811

E-mail: answers@tsi.com

Website: www.tsi.com

UK Tel: +44 149 4 459200

E-mail: tsiuk@tsi.com

Website: www.tsiinc.co.uk

France Tel: +33 491 11 87 64

E-mail: tsifrance@tsi.com

Website: www.tsiinc.fr

Germany Tel: +49 241 523030

E-mail: tsigmbh@tsi.com

Website: www.tsiinc.de

India Tel: +91 80 41132470

E-mail: tsi-india@tsi.com

China Tel: +86 10 8260 1595

E-mail: tsibeijing@tsi.com



TRUST. SCIENCE. INNOVATION.

Contact your local TSI Distributor or visit our website www.tsi.com for more detailed specifications.