


## SUREFLOW™ Model 8682 LonWorks Object

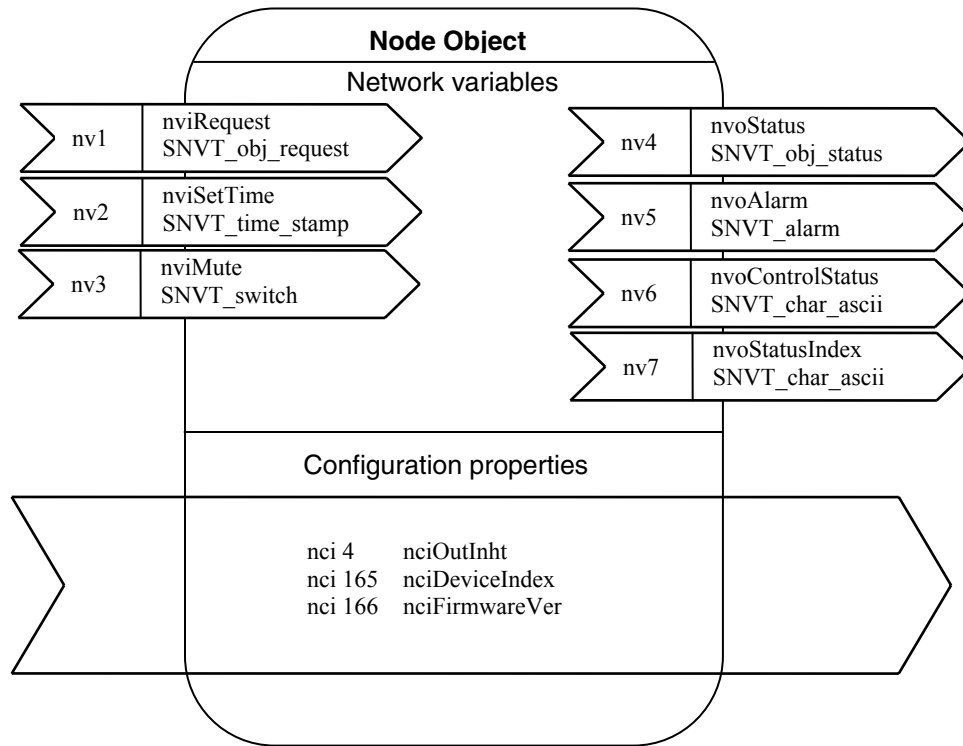

### LonWorks Room Controller Status Definitions

#### nvoControlStatus

Bit	Description
0	Standard
1	Unoccupied
2	Communications Error
3	Remote Setpoint
4	LON Override


Setting nviRequest.object\_request to RQ\_CLEAR\_ALM clears the current alarm from the controller and the BAS

#### nvoStatusIndex

Bit	Description
0	Normal
2	Low Alarm
3	High Alarm
4	Minimum Supply Alarm
5	Maximum Exhaust Alarm
6	Data Error
7	Emergency

### LonWorks Room Controller Emergency Mode Status Definitions

SNVT Status	Definition
EMERG_NORMAL	Normal (non-emergency) mode
EMERG_PURGE	Emergency mode

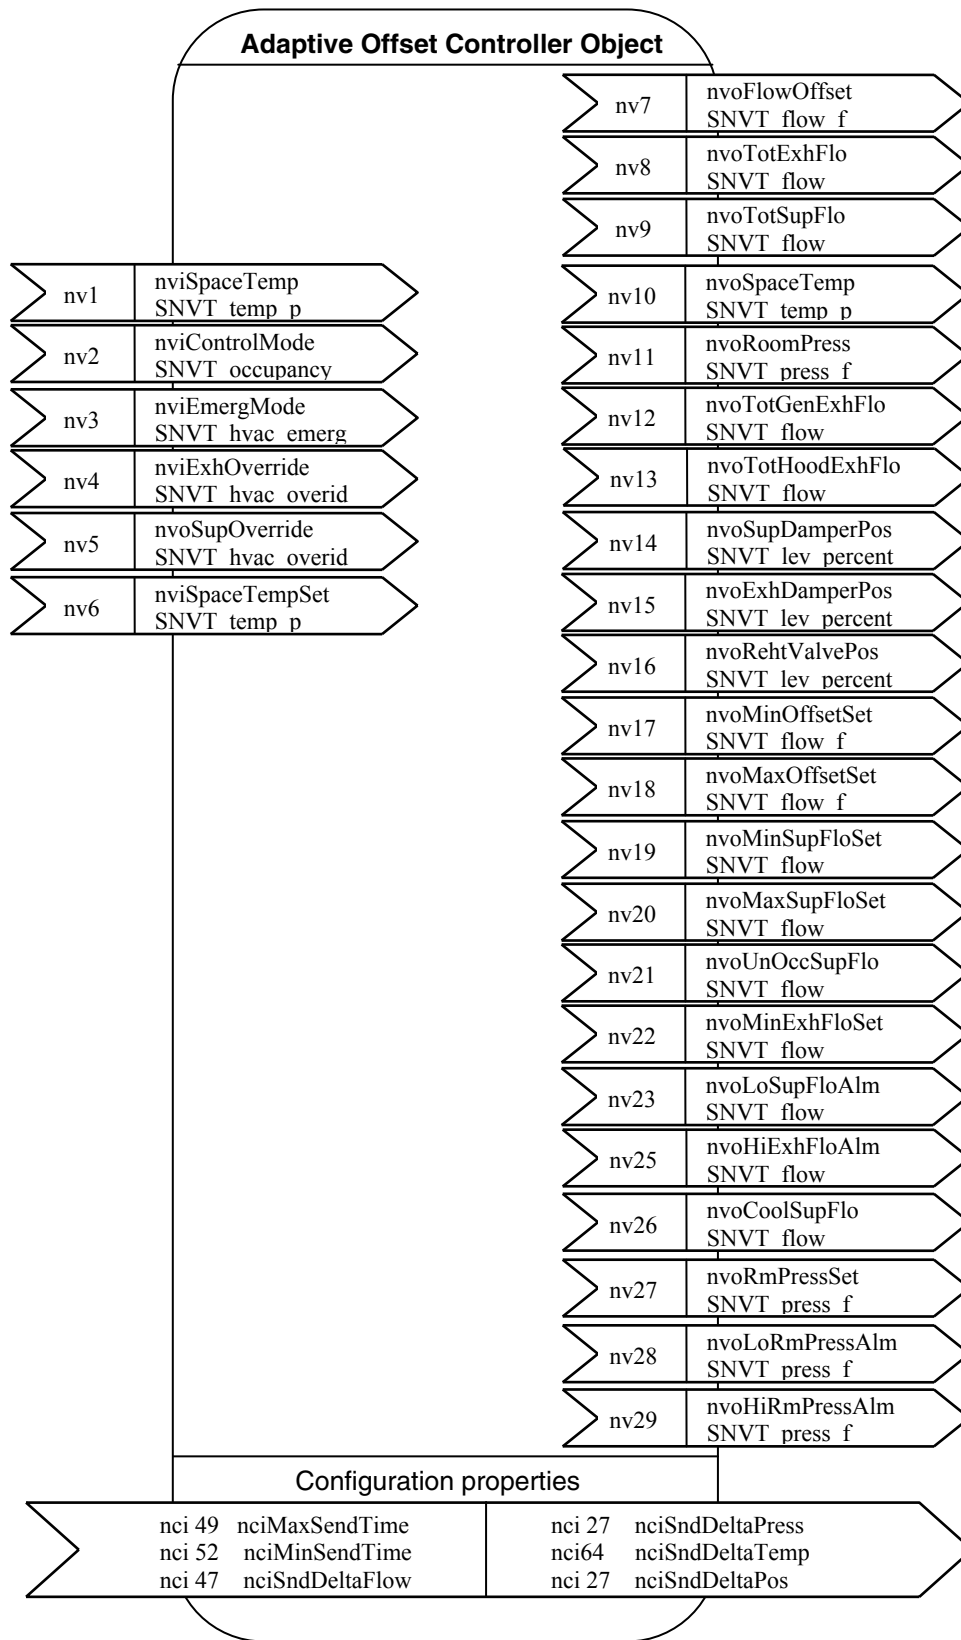

**Note:** nvoRoomPress (nv11) only used on Adaptive Offset Controller.



**TSI Incorporated**  
 500 Cardigan Road  
 Shoreview, MN 55126 U.S.A.  
 Tel: 651 490 2811  
 800 874 2811  
 Fax: 651 490 3824  
 E-mail: answers@tsi.com