


SUREFLOW™ Model 8650 LonWorks Object

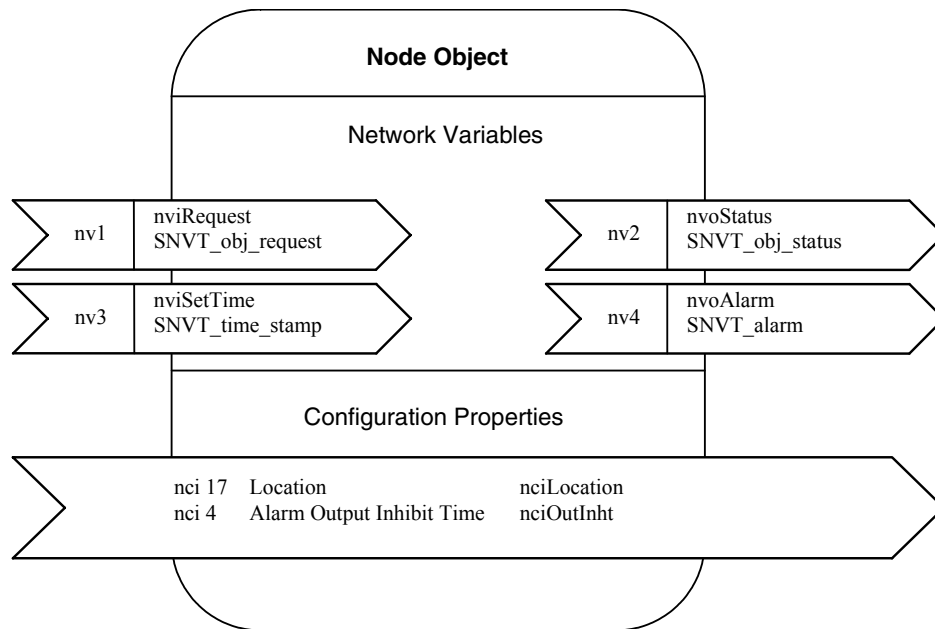


LonWorks Hood Controller Status Definitions

nvoStatusIndex

Bit	Description
0	0 = Occupied 1 = Unoccupied
1	Low Alarm
2	High Alarm
3	Sensor Error
4	Data Error
5	Emergency Mode
6	Override

Note Setting nviRequest.object_request to RQ_CLEAR_ALM clears the current alarm from the controller and the BAS.

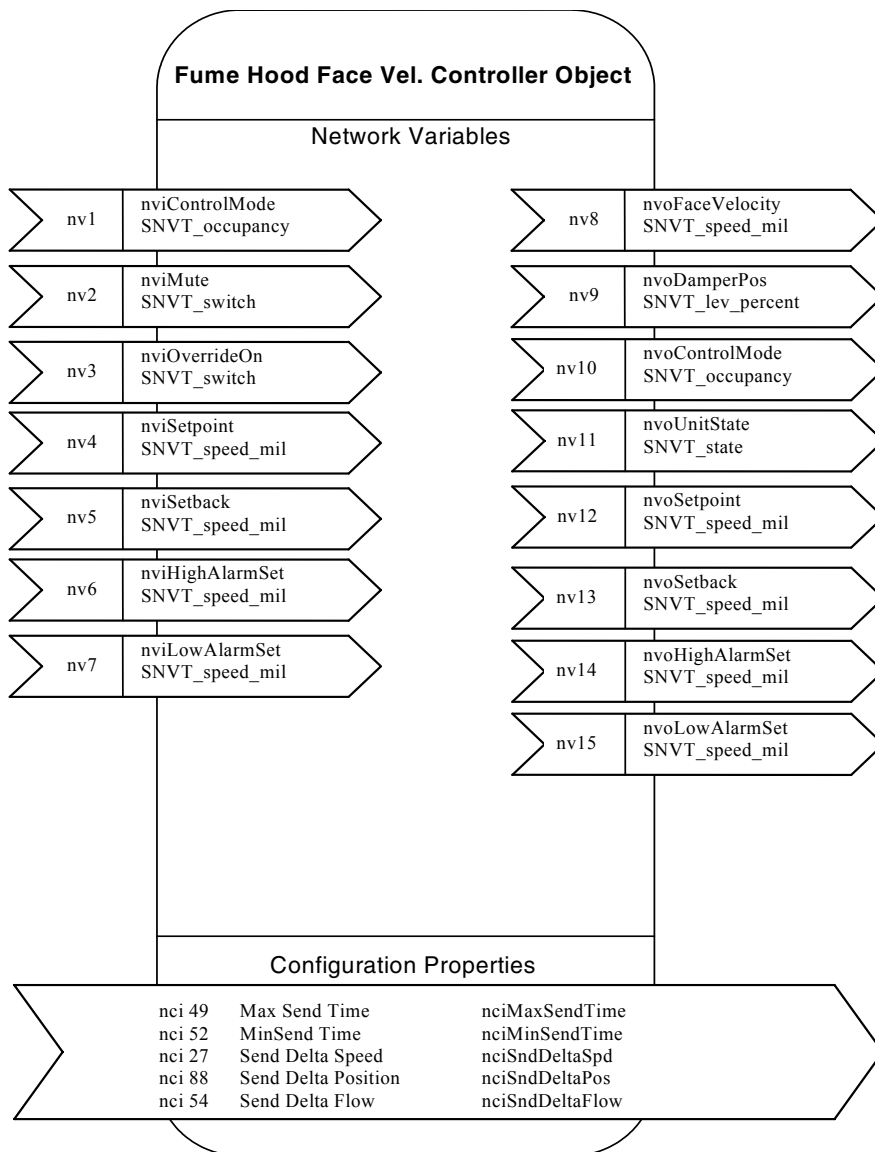

LonWorks Hood Controller Emergency Mode Status Definitions

SNVT Status	Definition
EMERG_NORMAL	Normal (non-emergency) mode
EMERG_PURGE	Emergency mode



TSI Incorporated

500 Cardigan Road
 Shoreview, MN 55126 U.S.A.
 Tel: 651 490 2811
 800 874 2811
 Fax: 651 490 3824
 E-mail: answers@tsi.com