


SUREFLOW™ Model 8636 LonWorks Object

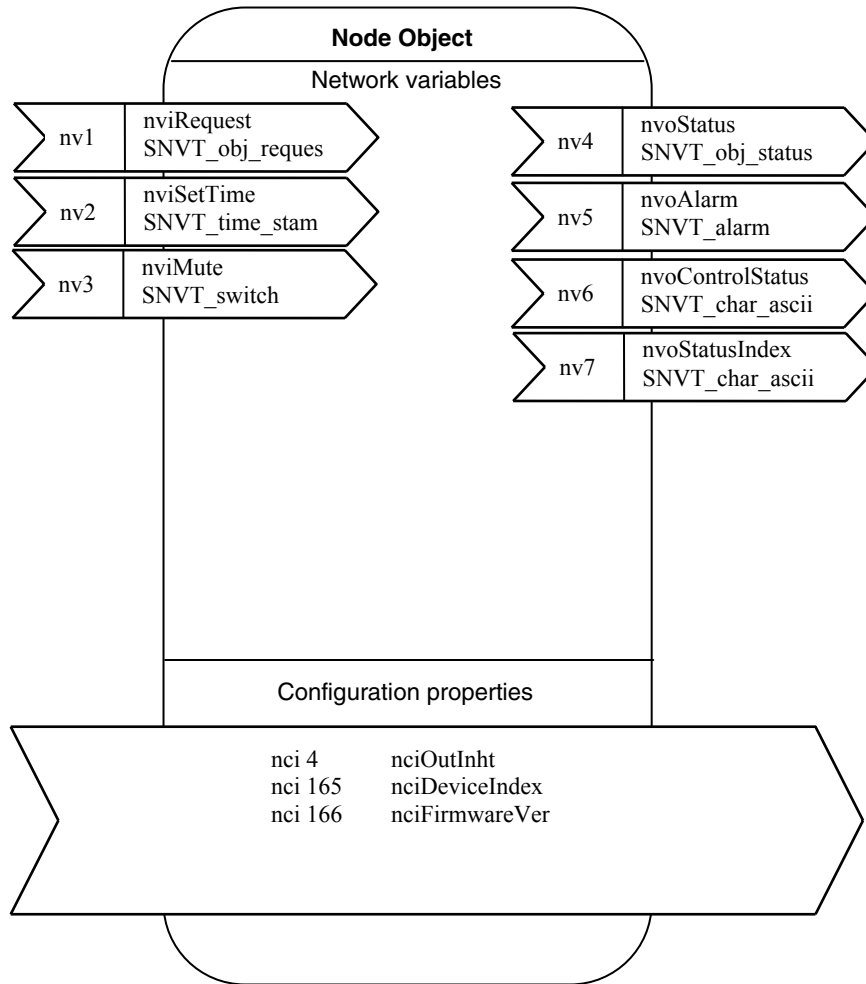


LonWorks Room Controller Status Definitions

nvoControlStatus	
Bit	Description
0	Standard
1	Unoccupied
2	Remote Setpoint


Setting nviRequest.object_request to RQ_CLEAR_ALM clears the current alarm from the controller and the BAS.

nvoStatusIndex	
Bit	Description
0	Normal
2	Low Alarm
3	High Alarm
4	Minimum Supply Alarm
5	Second Sensor Low Alarm
6	Second Sensor High Alarm
7	Data Error
8	Emergency
9	LON Override

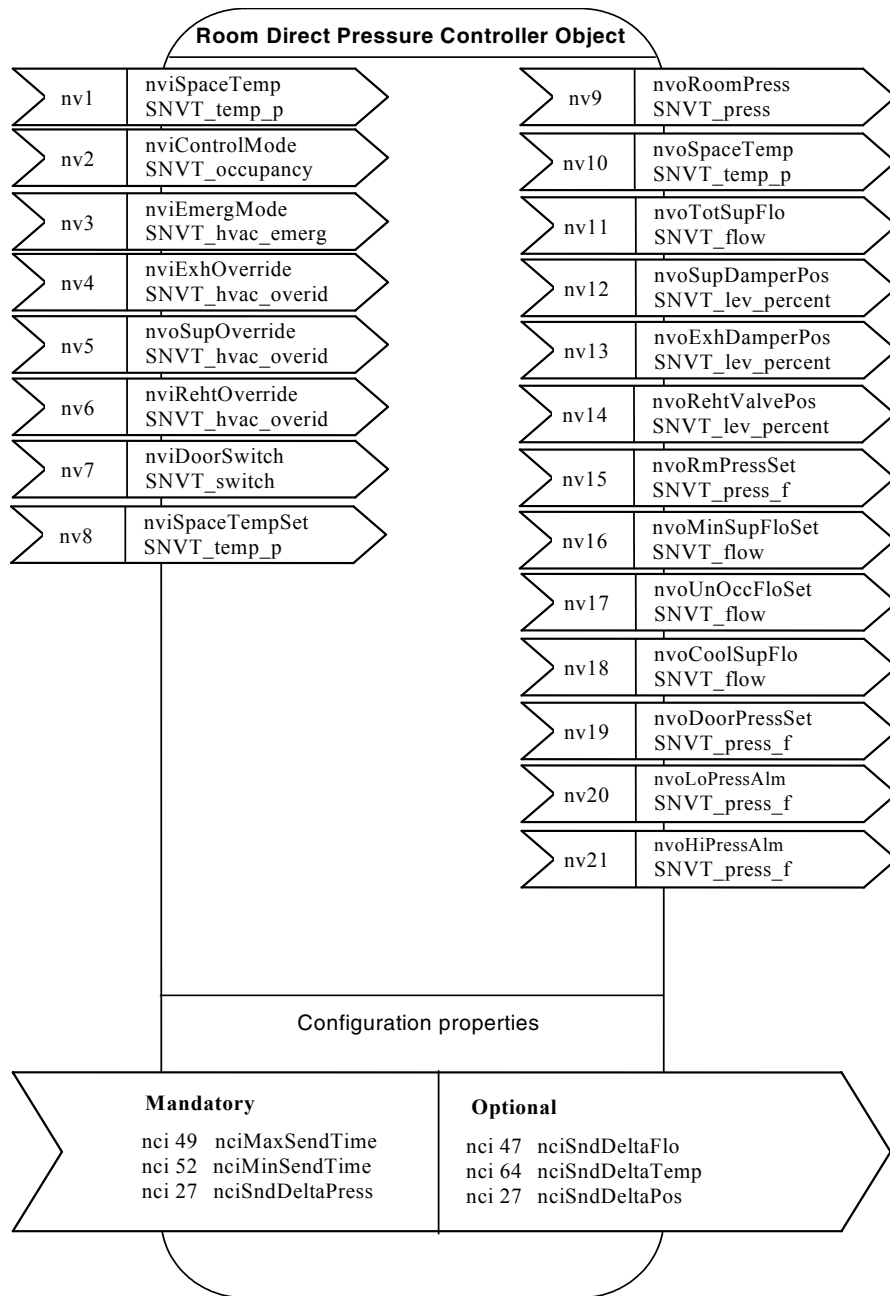

LonWorks Room Controller Emergency Mode Status Definitions

SNVT Status	Definition
EMERG_NORMAL	Normal (non-emergency) mode
EMERG_PURGE	Emergency mode

 

TSI Incorporated
 500 Cardigan Road
 Shoreview, MN 55126 U.S.A.
 Tel: 651 490 2811
 800 874 2811
 Fax: 651 490 3824
 E-mail: answers@tsi.com