

MODELS 8694, 8694-3, 8694-4, 8694-5, 8694-6, 8694-7, 8694-8

ROOM PRESSURE ALARM/CHANGEOVER SWITCH INSTALLATION INSTRUCTIONS

INSTALLING WITH THE MODEL 8630 PRESSURA

The purpose of these instructions is to guide the installer through the installation of the optional TSI Model 8694 series of Room Pressure Alarm/Changeover Switch to the Model 8630 PRESSURA. The complete Model 8630 PRESSURA installation is covered in the *Model 8630 Room Pressure Installation Instructions*.

The Model 8694 and 8694-3 alarm/changeover switch must be wired per Figure 1 (below). The Models 8694-4, 8694-5, 8694-6, 8694-7 or 8694-8 must be wired per Figure 2. Wire should be 24 AWG or larger (not supplied). Any modification to the wiring may damage the alarm and room pressure device.

The keyswitch models have the following electrical characteristics:

<u>Key Position</u>	<u>Output (resistance)</u>
Negative	Open - infinite
Positive	Closed - 0
Neutral	273 Kohm

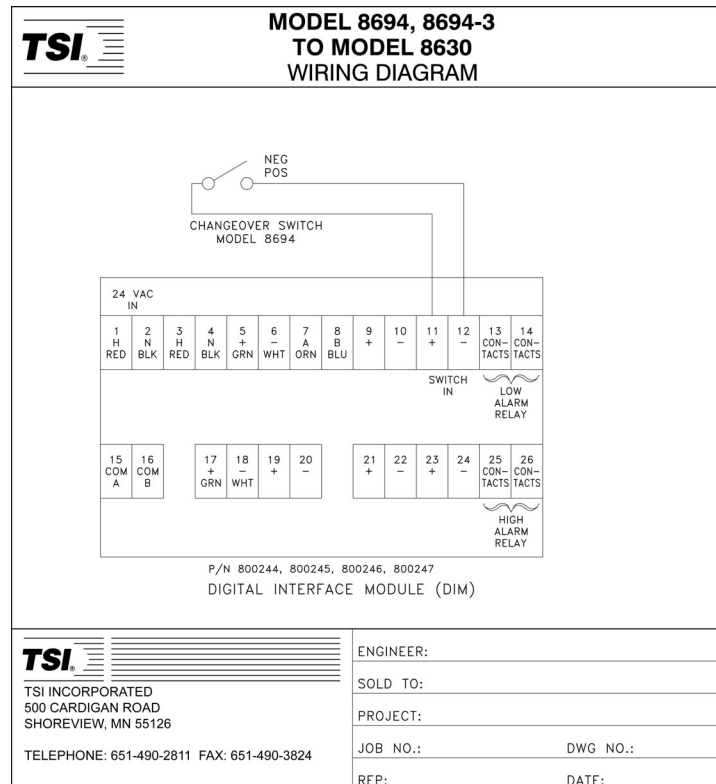


Figure 1: Wiring Diagram - Models 8694, 8694-3



**MODEL 8694-4, 8694-5, 8694-6, 8694-7, 8694-8
TO MODEL 8630
WIRING DIAGRAM**

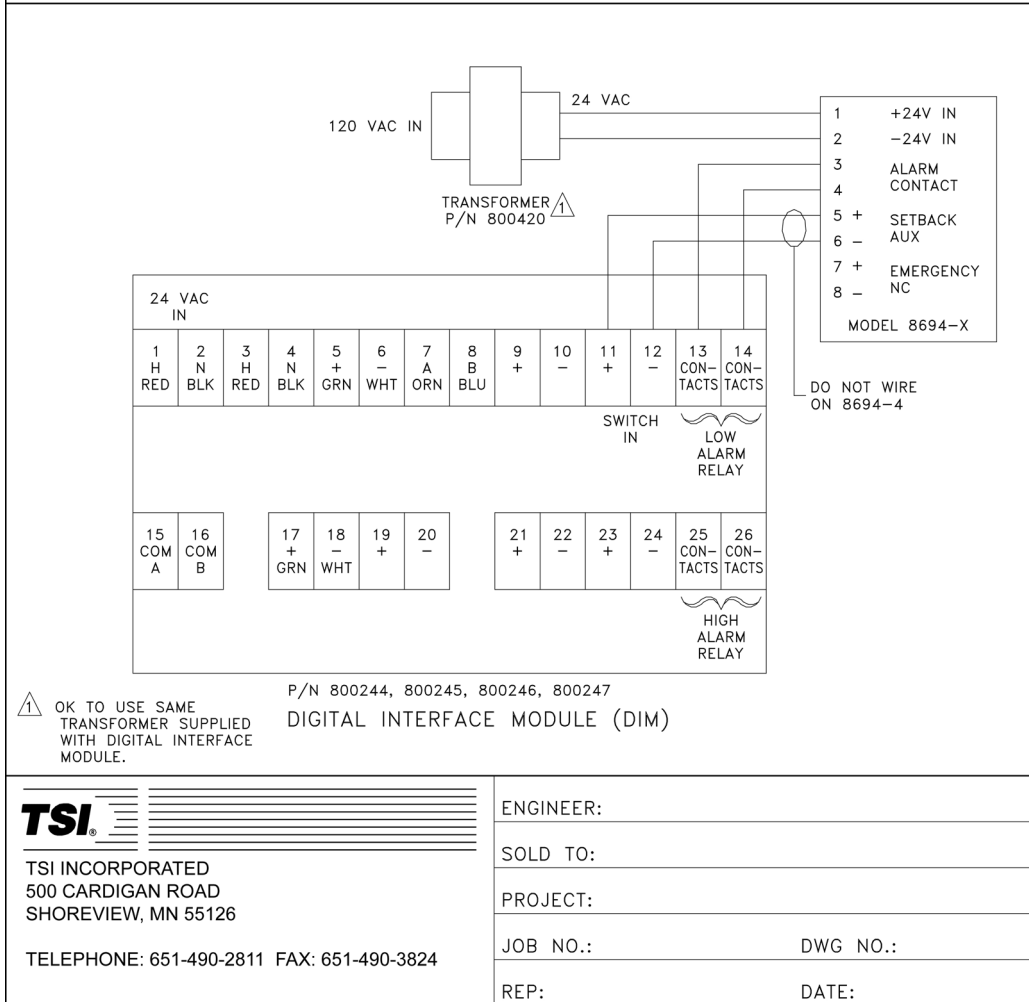


Figure 2: Wiring Diagram - Models 8694-4, 8694-5, 8694-6, 8694-7, 8694-8

The alarm light models have a green light lit when room pressure alarm contact is open. When the alarm contact closes (alarm condition), the green light is off and the red light is lit.

This concludes installation of the alarm/changeover switch. If you need assistance installing the Digital Interface Module, see the *Model 8630 Room Pressure Installation Instructions*. If you need further assistance, contact your local representative or TSI at 1-800-874-2811.