

# AirPro<sup>®</sup> Mobile Solutions

## Quick Start Guide



Thank You for Purchasing an AirPro<sup>®</sup> Mobile Solution. For further information, please visit us online at [www.tsi.com/AirPro](http://www.tsi.com/AirPro).

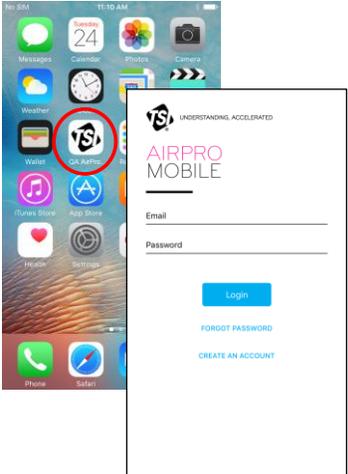
Remove and Confirm Equipment		
		
Model AP500	Model AP800	Models VTH-A, VTH-S, VT-A, VT-S, or TH-S

Install Supplied Battery (charge if necessary)	
	

Install Probe (AirPro <sup>®</sup> AP500 only)	
	

Power Instrument On			
			
	Power indicator	Bluetooth <sup>®</sup> connectivity indicator	Charging indicator
	Green = Battery power is OK	Flashing = Broadcasting	On = Battery is charging
Red = Battery power is low	Steady = Connected	Off = Battery is not charging	

- AirPro® mobile can be downloaded from <https://itunes.apple.com/us/app/airpro-mobile/id1146476516?mt=8> for iOS.
- AirPro® mobile can be downloaded from <https://play.google.com/store/apps/details?id=com.tsi.android&hl=enfor> for Android.
- An account can be created at <https://my.tsi.com>.

Launch the App and Sign On	Connect to Instrument(s)	Take Measurement
		

### Return for Service

To return the instrument, complete the “Service Request” form at [tsi.com/service](https://tsi.com/service) or call TSI® at 1-800-680-1220 (USA), (651) 490-2860, or 001 651 490-2811 (International) for specific return instructions.

### Safety and Compliance



#### WARNING

The AirPro® 500 and AirPro® 800 Wireless Air Velocity Instrument use a rechargeable Lithium ion battery with built-in protection against fire and explosion hazard. Use only TSI® supplied batteries (part number 800532) in this instrument. **DO NOT** use a substitute or non-rechargeable battery. **ALWAYS** dispose of Li-ion batteries in compliance with regional requirements.

Hereby, TSI® Incorporated declares that this Bluetooth® Low Energy test and measurement instrument is in compliance with Directive 2014/53/EC. Declaration of Conformity can be found at: [www.tsi.com/AirPro-CE-DOC](http://www.tsi.com/AirPro-CE-DOC).

TSI® has provisional patent applications associated with the AirPro® Product Solution. For further information, please refer to the TSI® website: <http://www.tsi.com/patents/>.



TSI Incorporated – Visit our website [www.tsi.com](http://www.tsi.com) for more information.

<b>USA</b>	<b>Tel:</b> +1 800 680 1220	<b>India</b>	<b>Tel:</b> +91 80 67877200
<b>UK</b>	<b>Tel:</b> +44 149 4 459200	<b>China</b>	<b>Tel:</b> +86 10 8219 7688
<b>France</b>	<b>Tel:</b> +33 1 41 19 21 99	<b>Singapore</b>	<b>Tel:</b> +65 6595 6388
<b>Germany</b>	<b>Tel:</b> +49 241 523030		

TSI, TSI logo, and AirPro are registered trademarks of TSI Incorporated in the United States and may be protected under other country's trademark registrations.

Bluetooth is a registered trademark of Bluetooth SIG, Inc., a Delaware corporation (“Bluetooth SIG”).

