PORTACOUNT® PRO/PRO+ RESPIRATOR FIT TESTER

QUICK START GUIDE

This guide will help you to quickly begin using your PortaCount® Pro /Pro+ Respirator Fit Tester for first time use with a personal computer.



1. Software Installation

Install the FitPro+™ Fit Test software on your computer (for further instructions, please see the FitPro+ Fit Test Software User's Manual, included on the FitPro+ Software CD in pdf format).



2. Initial PortaCount Pro/Pro+ Respirator Fit Tester Start-Up

Plug the PortaCount Pro fit tester into an AC power source. Press the **On/Off** button to turn the PortaCount Pro fit tester on.




Refer to the Interactive Training Tutorial and PortaCount Academy Online Training Center website (www.tsi.com/pcacademy) to learn about other necessary components and procedures, such as when to install the Alcohol Cartridge and how to perfrom the Daily Checks.

3. Communications Setup

After the PortaCount Pro fit tester has completed its initial warm up, connect the USB cable from the PortaCount Pro fit tester to your computer.

Connect the "USB-A" connection to the computer, the "USB-B" connection to the PortaCount Pro fit tester.

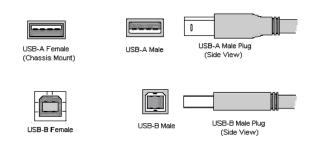

4. Device Driver Installation

Microsoft[®] Windows[®] 7, 8, and 10 operating system: Device drivers install automatically during software installation.




If the Wizard does not start automatically, or drivers do not install as described, refer to the RESFT 105: PortaCount Pro-to-PC Communications instructional course located at the PortaCount Academy Online Training Center website: www.tsi.com/pcacademy.

5. FitPro+ Software Start-Up

Start the FitPro Fit Test software.




If prompted, select the appropriate default exercise protocol that your organization follows for fit testing. For example: "OSHA 29CFR1910.134". Click **Next>>**.

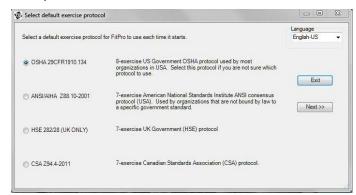



6. Verify Communications


 To verify successful PortaCount Pro-to-Computer communications, when prompted to perform Daily Checks, click No.

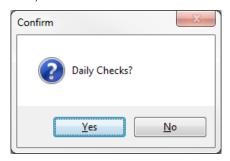

Be sure to go back and perform the Daily Checks before fit testing.

b. Go to **Setup | PortaCount Communication** menu.

- c. Select the appropriate PortaCount Pro Module Type: "PortaCount 8030/8038 Fit Test Driver."
- d. Click Select.
- e. Verify that the PortaCount Fit Tester is connected. A message similar to the one shown below should display.

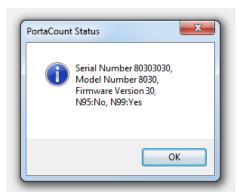

Further Learning

You are now ready to learn about the daily operations of the PortaCount Pro Respirator Fit Tester and FitPro+ software. Refer to the PortaCount Pro Fit Tester Operation and Service manual, the FitPro+ Fit Test Software manual. These manuals are included in PDF format on the FitPro+ Software Installation CD and are available for download from the TSI website: www.tsi.com/portacount.

For further training on PortaCount Pro Respirator Fit Testing refer to the PortaCount Academy website at www.tsi.com/pcacademy.



TSI Incorporated – Visit our website www.tsi.com for more information.

USA Tel: +1 800 874 2811 UK Tel: +44 149 4 459200 France Tel: +33 1 41 19 21 99 Germany Tel: +49 241 523030 India Tel: +91 80 67877200 China Tel: +86 10 8219 7688 Singapore Tel: +65 6595 6388

Printed in U.S.A.