

Model 8630 CFM Option


Installation Instructions

Installing with the Model 8630 PRESSURA™ Monitor

The purpose of these instructions is to guide the installer through the installation of the optional TSI flow station and pressure transducer. The complete Model 8630 PRESSURA installation is covered in the *Model 8630 Room Pressure Installation Instructions*. Make sure drawing used for wiring matches Digital Interface Module (DIM) part number being installed.

The CFM option must be wired per the figure below. Wire should be 22 AWG or larger (supplied). Any modification to the wiring may damage the transducer and Digital Interface Module.

WARNING The transformer provided must be used to power pressure transducer. Do **not** power any other devices with transformer.

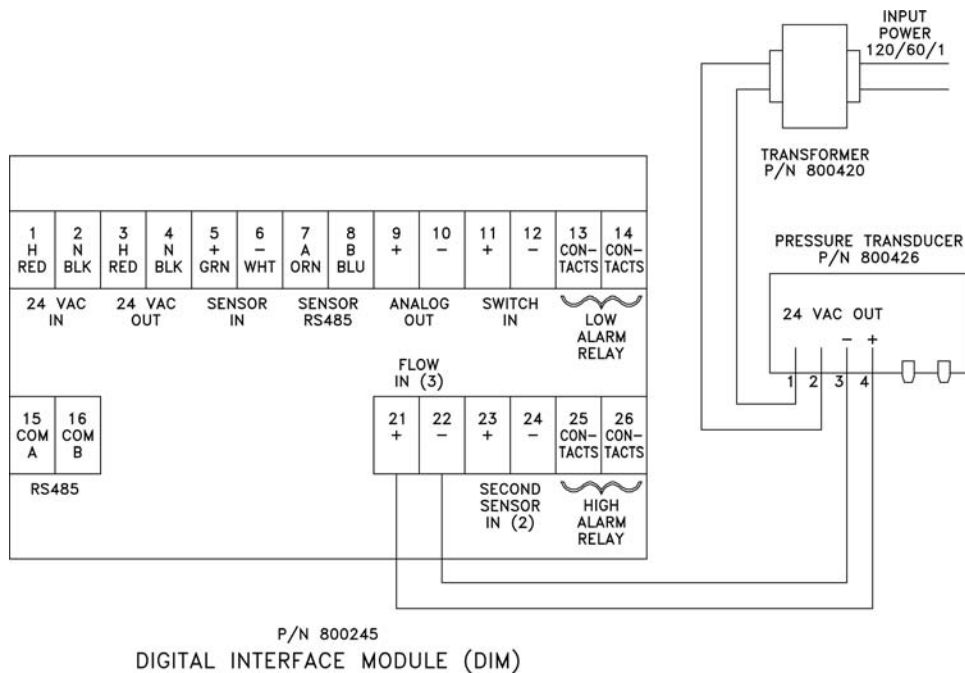

P/N 800245

DIGITAL INTERFACE MODULE (DIM)

Figure 1: P/N 800245 Flow Wiring



Figure 2: P/N 800246, 800247 Exhaust Flow Wiring


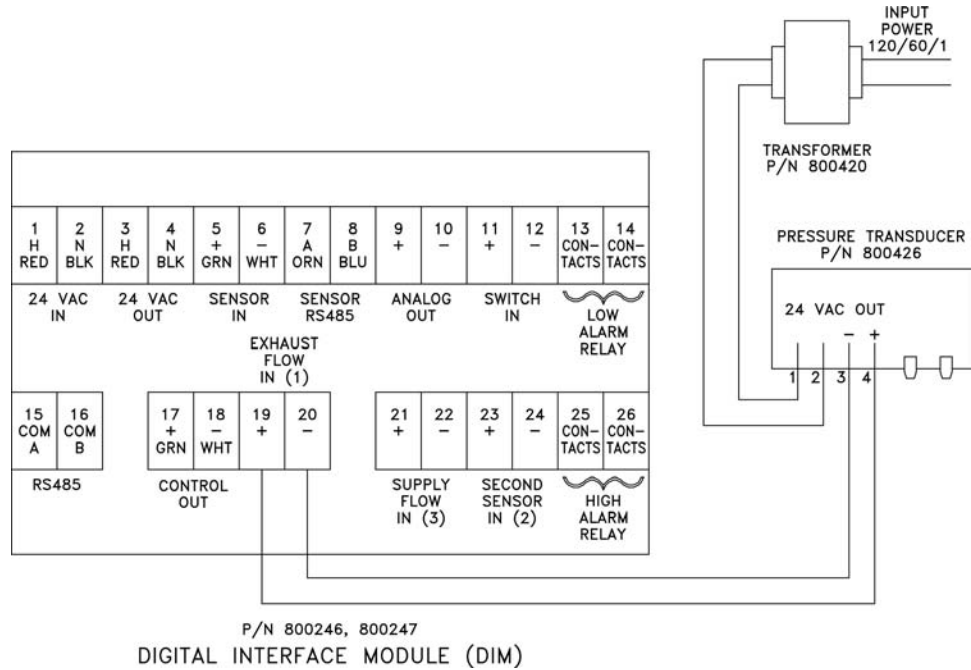


Figure 3: P/N 800247 Supply Flow Wiring

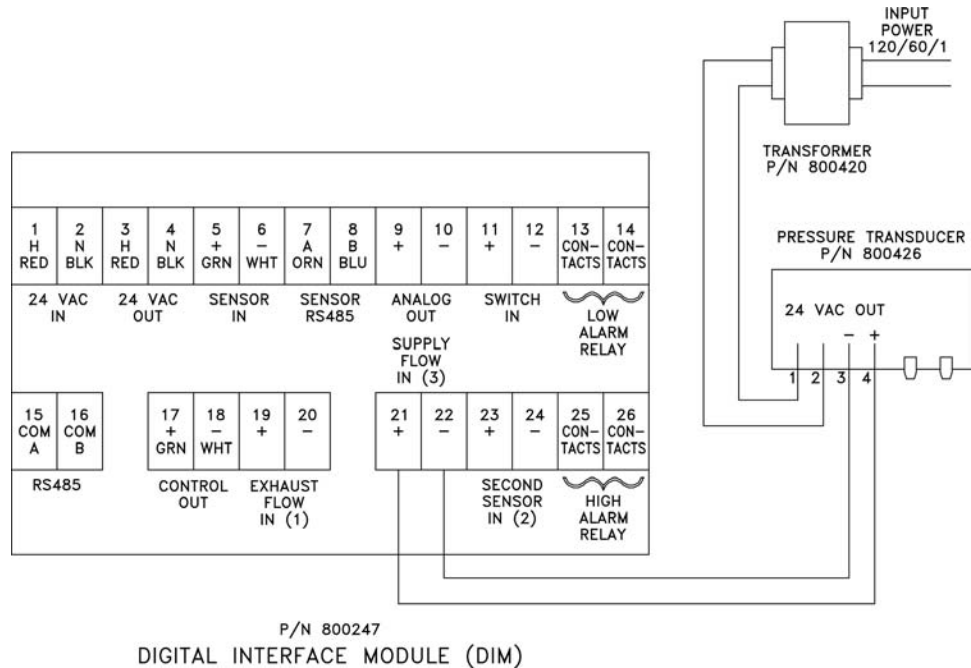

This concludes installation of the CFM option. If you need assistance installing the Digital Interface Module, see the *Model 8630 PRESSURA Installation Instructions*. If you need further assistance, contact your local representative or TSI at 1-800-874-2811.

TSI Incorporated – 500 Cardigan Road, Shoreview, MN 55126 U.S.A

USA	Tel: +1 800 874 2811	E-mail: answers@tsi.com	Website: www.tsi.com
UK	Tel: +44 149 4 459200	E-mail: tsiuk@tsi.com	Website: www.tsiinc.co.uk
France	Tel: +33 491 11 87 64	E-mail: tsifrance@tsi.com	Website: www.tsiinc.fr
Germany	Tel: +49 241 523030	E-mail: tsigmbh@tsi.com	Website: www.tsiinc.de
India	Tel: +91 80 41132470	E-mail: tsi-india@tsi.com	
China	Tel: +86 10 8251 6588	E-mail: tsibeijing@tsi.com	
Singapore	Tel: +65 6595 6388	E-mail: tsi-singapore@tsi.com	



TRUST. SCIENCE. INNOVATION.

Contact your local TSI Distributor or visit our website www.tsi.com for more detailed specifications.