


## PRESSURA™ Model 8631-CRM LonWorks Object

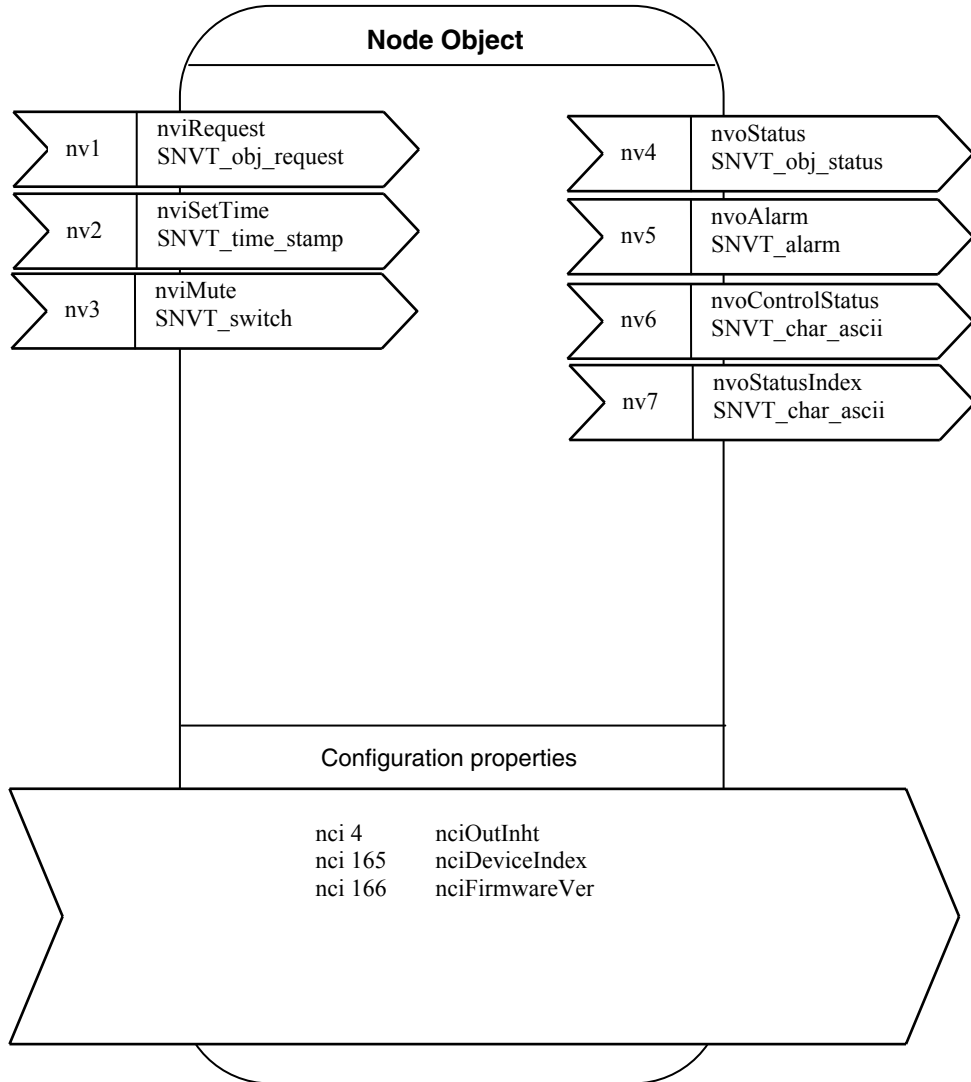

### LonWorks Room Controller Status Definitions

#### nvoControlStatus

Bit	Description
0	Pressure Monitor
1	Supply Flow Control

Setting nviRequest.object\_request to RQ\_CLEAR\_ALM clears the current alarm from the controller and the BAS

#### nvoStatusIndex


Bit	Description
0	Normal
1	Low Alarm
2	High Alarm
3	Minimum Supply Alarm
4	Second Sensor Low Alarm
5	Second Sensor High Alarm
6	Data Error

### Room Direct Pressure Monitor Object

nv1	nvoRoomPress SNVT_press_f
nv2	nvoAirlockPress SNVT_press_f
nv3	nvoTotSupFlo SNVT_flow
nv4	nvoLoAlPressAlm SNVT_press_f
nv5	nvoHiAlPressAlm SNVT_press_f
nv6	nvoLoPressAlm SNVT_press_f
nv7	nvoHiPressAlm SNVT_press_f

Configuration properties

nci 49 nciMaxSendTime  
nci 52 nciMinSendTime  
nci 27 nciSndDeltaPress  
nci 47 nciSndDeltaFlo



**TSI Incorporated**

500 Cardigan Road  
Shoreview, MN 55126 U.S.A.

Tel: 651 490 2811  
800 874 2811

Fax: 651 490 3824

E-mail: [answers@tsi.com](mailto:answers@tsi.com)