

Overcoming Challenges in Vaporizing High-k Dielectrics Using Nanodroplet Atomization

Author: Derek Edmunds

Date of Publication: February, 2024

1. Introduction

In the realm of semiconductor technology, where precision and speed are paramount, the demand for innovative materials is at an all-time high. High-k dielectrics, emerging as a pivotal element in this field, are at the vanguard of the latest technological advancements. Despite their potential to revolutionize the industry, their integration presents significant challenges. This white paper explores the multifaceted aspects of High-k dielectrics - from their extensive benefits to the intricacies of their vaporization process, including the revolutionary nanodroplet atomization technique. Join us in a detailed examination of the evolving landscape of high-k dielectric vaporization.

2. Benefits of Using High-k Dielectrics

High-k dielectrics have steadily risen to prominence in the electronics domain, particularly within the semiconductor industry. Their special attributes present a multitude of benefits, rendering them essential for a range of technological pursuits.

In the past, the semiconductor landscape was largely dominated by materials with lower dielectric constants, like SiO₂. However, as electronics sought miniaturization, speed, and efficiency, the industry transitioned towards materials with higher dielectric constants, namely High-k dielectrics. This shift overcame many challenges posed by the older materials.

Among the benefits of High-k dielectrics are:

- 1. Improved Capacitance:** Given that capacitance is tied to the dielectric constant, High-k dielectrics offer better data storage and elevate overall device performance, aligning with the needs of modern electronics.
- 2. Miniaturization:** With the semiconductor sector focusing on smaller devices, High-k dielectrics are integral in maintaining Moore's law. They ensure that as devices scale down, performance remains consistent.

3. Lower Power Consumption: Devices equipped with High-k dielectrics are more power-efficient than their counterparts. This not only heightens energy conservation but also prolongs the device's life.

4. Reduced Leakage Current: Acting as barriers against electron tunneling, High-k materials minimize leakage current, thereby enhancing device dependability and efficacy.

Some common metals used in high-k dielectric precursors are Zirconium (Zr), Hafnium (Hf), and Cobalt (Co). These materials are essential in the creation of high-k dielectric films, and they must be available in a form suitable for vaporization. Generally, this means they should be in a liquid state at room temperature. To achieve this, these metals are often converted into organometallic compounds. For instance, Zirconium and Hafnium are utilized as Tetrakis(ethylmethyamido)zirconium (TEMAZ) and Tetrakis(ethylmethyamido)hafnium (TEMAH), respectively. Cobalt is similarly processed into a volatile precursor like (3,3-Dimethyl-1-butynyl)dicobalt hexacarbonyl (CCTBA).

These precursors are selected based on their volatility and stability, which are essential for efficient and reliable deposition in semiconductor device fabrication. Notably, cyclopentadienyl compounds of Zirconium (CpZr) and Hafnium (CpHf) are becoming increasingly preferred for their higher vapor pressures and greater stability, attributed to their elevated decomposition temperatures. Their growing popularity underscores their effectiveness in meeting the rigorous demands of advanced semiconductor manufacturing processes.

Furthermore, the influence of High-k dielectrics extends beyond semiconductors. They're making noteworthy strides in areas such as medical devices and space ventures, optimizing the efficacy and durability of products in diverse sectors.

3. Challenges in Vaporizing High-k Dielectrics

Traditional techniques for vaporizing high-k dielectrics face a range of complexities. High thermal requirements not only elevate energy consumption but also introduce the risk of compromising the integrity of the substrate and other materials involved. Additionally, these methods are often marked by suboptimal vapor distribution, material underutilization, and the constraints imposed by low vapor pressures of the dielectrics.

- 1. Low Vapor Pressures:** One of the primary challenges with high-k dielectrics is their naturally low vapor pressures. Precursors with low vapor pressures typically require increased energy for vaporization and exhibit slower evaporation rates. This condition results in limited vapor flow rates, constraining the efficiency and speed of deposition processes in semiconductor manufacturing.
- 2. Thermal Decomposition:** The requirement for high temperatures during vaporization introduces significant risks. There's always a potential for thermal degradation to both the substrate and any other materials involved, especially those that are temperature-sensitive, which is common among High-k dielectric precursors.
- 3. High Operating Temperatures:** Traditional vaporization methods demand high temperatures, making the process energy-intensive and leading to increased operational costs. The situation is further complicated by the need for specialized equipment that can endure these high-temperature conditions.
- 4. Uneven Distribution:** The incomplete or partial vaporization of the dielectric can lead to uneven distribution. If some of the flow isn't fully vaporized, it can result in inconsistencies when the material is deposited onto the substrate. This, in turn, can affect the quality of the film and influence the performance of the resulting semiconductor device.
- 5. Inefficient Usage of Material:** There's often a degree of inefficiency associated with traditional vaporization techniques. Incomplete vaporization or suboptimal transfer to the substrate can lead to material wastage, posing both economic and environmental challenges.

The vaporization of high-k dielectrics is hindered by significant challenges, with the predominant issues being low vapor pressures and the risk of thermal degradation. Addressing these concerns requires a comprehensive approach that draws from fields such as thermodynamics, surface chemistry, and mechanical engineering. This interdisciplinary collaboration is crucial for the industry to develop more effective vaporization methods.

4. Thermal Decomposition in High-k Dielectrics

The development of new techniques for vaporizing high-k dielectrics primarily focuses on addressing the challenge of thermal decomposition. Many high-k dielectric precursors exhibit low vapor pressures, necessitating the application of higher heat for more extended periods to achieve vaporization.

Such elevated temperatures can cause material deterioration, resulting in the loss of essential properties and compromising the end product's integrity. This degradation impacts the electrical characteristics of the dielectrics and can lead to diminished reliability and performance in the final device. In addition, the chemical breakdown can cause clogging within the system, significantly reducing the lifespan of components.

In the fabrication of semiconductor devices, managing the thermal decomposition of high-k dielectric precursors is a fundamental aspect of process control. The Arrhenius equation is essential for understanding and quantifying this decomposition, providing a predictive relationship between temperature and the rate of precursor degradation. This equation is essential for identifying the optimal processing conditions that prevent the loss of material integrity.

Equation 1: Arrhenius equation for thermal decomposition rate

$$k = Ae^{\frac{-E_a}{RT}}$$

Where:

- k = Rate constant
- A = Arrhenius factor (frequency factor)
- T = Absolute temperature
- E_a = Activation Energy
- R = Universal gas constant

Temperature sensitivity in the thermal decomposition of high-k dielectric precursors is linked to the exponential increase in the reaction rate with rising temperature. This increase is a result of the decreasing exponent $e^{\frac{-E_a}{RT}}$ in the Arrhenius equation. Time is also a critical factor, as longer exposure to heat, even at optimal temperatures, can cumulatively increase the rate of decomposition.

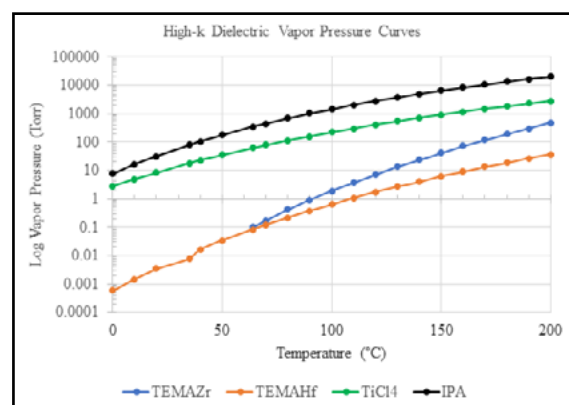


Figure 1. Comparative Vapor Pressure Curves of High-k Dielectric Precursors and IPA

The graph above illustrates the vapor pressure curves for various high-k dielectric precursors, with isopropanol (IPA) included as a comparative baseline. Notably, TEMAZr and TEMAHf demonstrate a significantly lower vapor pressure compared to the other substances, especially at lower temperatures. This characteristic necessitates higher temperatures to achieve vaporization, yet such conditions can expedite thermal decomposition, as detailed by the Arrhenius equation.

Precursors with lower vapor pressures, such as TEMAZr, demand greater heat for vaporization, which must be carefully managed to avoid accelerated decomposition. The disparity in vapor pressures among these materials underscores the importance of tailoring vaporization strategies to each precursor's properties. Such tailored approaches are vital for developing efficient and secure vaporization techniques essential for advanced semiconductor fabrication processes.

5. The Nanodroplet Atomization Solution

Nanodroplet atomization technology presents a novel approach to address the challenges in vaporizing high-k dielectrics. By generating nanometer-scale droplets, this method utilizes the increased surface area-to-volume ratios, which significantly enhance heat transfer, enabling vaporization at comparatively lower temperatures.

Equation 2: Surface area-to-volume ratio

$$\text{Surface Area to Volume Ratio (SA:V)} = \frac{\text{Surface Area}}{\text{Volume}}$$

For a sphere, the SA:V is given by $\frac{3}{r}$, where r is the radius. Smaller droplets have larger SA:V, increasing the efficiency of heat transfer.

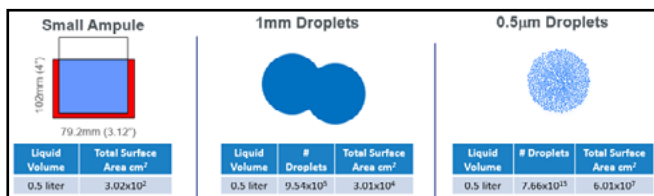


Figure 2. Surface Area to Volume Ratios for Different Heating Approaches.

The comparative analysis presented in Figure 2 underscores the exponential benefits of nanodroplet atomization. While the 1mm droplets already present a significant surface area advantage over the ampule, 0.5µm droplets provide an astoundingly larger surface. Impressively, nanodroplets increase the surface area by over 10⁵ times compared to the small ampule. This significant increment in surface area, relative to volume, is pivotal for enhancing vaporization processes.

Nanodroplet atomization not only circumvents the traditional challenges associated with vaporizing high-k dielectrics but also offers an energy-efficient mechanism that is optimal for semiconductor and broader industrial applications. By leveraging the increased SA:V ratios, this technology ensures enhanced heat transfer and maximizes vaporization efficiency with adjustable flow rates.

6. Integration with Heat Exchangers

Heat exchangers play a pivotal role in the nanodroplet atomization process by supplying the essential thermal energy needed to vaporize atomized nanodroplets. They must operate with high efficiency to provide sufficient heat while avoiding the overexertion that could lead to thermal decomposition, maintaining a controlled environment.

The system's stability is largely due to the effective heat transfer within the exchanger, facilitated by the interaction between the droplet's surface area and the heat medium. The use of a carrier gas is particularly advantageous for high-k dielectrics, acting as an intermediary heat medium that ensures uniform heat distribution and serves as a protective agent against thermal decomposition, safeguarding the integrity of the materials.

Equation 3: Heat transfer equation

$$Q = h \times A \times \Delta T$$

Where:

Q is the heat transfer rate

h is the heat transfer coefficient

A is the surface area of the droplet

ΔT is the temperature difference between the droplet and the heat exchanger medium

The greater the surface area A , the more effective the heat transfer Q . In practical terms, this means that nanodroplets, due to their increased surface area relative to their volume, can transfer heat more effectively than larger droplets, enhancing the overall performance of the heat exchanger.

7. Benefits of the Integrated Approach

Using a nanodroplet atomizer with a heat exchanger combines the strengths of both technologies. This combination not only improves the vaporization process but also brings several other advantages:

1. Highly Stable Vapor Flow Rates: The nanodroplet atomization technique ensures exceptionally stable vapor flow rates, which is crucial for consistent and predictable deposition in semiconductor manufacturing. This stability is a product of the small droplet size and well-controlled distribution, enabling uniform heat transfer and vaporization even when working with materials that have inherently low vapor pressures.

2. High Flow Rates: This integrated method also achieves higher flow rates compared to traditional vaporization techniques. By optimizing the surface area-to-volume ratio of the nanodroplets, the system can efficiently transfer heat and vaporize more material in less time, increasing throughput without sacrificing quality.

3. Long Lifetime: The nanodroplet atomization approach enhances heating efficiency and reduces the exposure time of materials to high temperatures. This leads to less material clogging, significantly extending the operational lifetime of the equipment and reducing the frequency of maintenance and replacement costs.

4. Solution for Almost All Liquids: Nanodroplet atomization technology is versatile and effective for a wide array of liquids, including those that are thermally sensitive or have low vapor pressure. This vaporization process allows even the more unstable substances to be vaporized without degradation by optimizing heat transfer, broadening the scope of materials that can be processed with this technology.

The benefits of using nanodroplet atomization with a heat exchanger clearly highlight the superior efficiency and control this technology brings to the vaporization process. To further illustrate these points, the following graph provides empirical evidence of the performance enhancements.

It compares the downstream vapor pressure stability of the nanodroplet-based MSP Turbo II™ Vaporizer with that of traditional DLI vaporization methods, showcasing the practical impact of these advancements in a real-world setting.

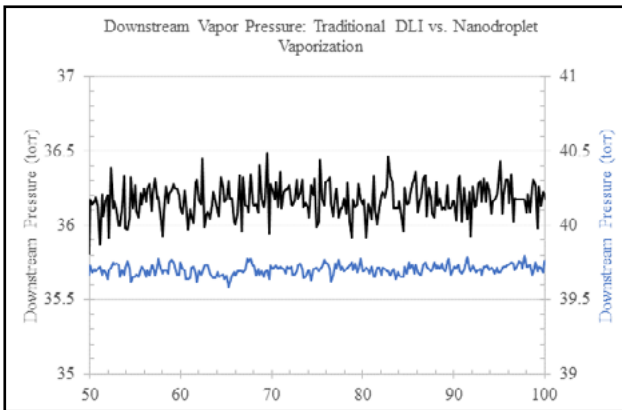


Figure 3. Downstream Vapor Pressure: MSP Turbo™ Vaporizer vs. Traditional DLI Vaporization

The graph presented in Figure 3 reveals a distinct advantage of using nanodroplet atomization in tandem with heat exchangers. It illustrates a more stable downstream heat exchanger pressure, evidenced by the reduced pressure variance when compared against the traditional DLI solution. Such stability validates the effectiveness of this integration, enhancing reliability and reducing associated risks in the vaporization of High-k dielectrics.

8. Conclusion

As we stand at the crossroads of technological advancement, the vaporization of high-k dielectrics emerges as a critical area ripe for innovation. The emergence of nanodroplet atomization, in synergy with heat exchanger technology, represents a significant leap forward in overcoming the longstanding challenges of low vapor pressures and thermal degradation. This white paper has highlighted not only the theoretical underpinnings of this technology but also its practical implications in enhancing the efficiency, safety, and quality of semiconductor manufacturing processes.

The journey towards integrating these advanced techniques into standard industry practices is not without its hurdles. However, the compelling benefits they offer — from improved energy efficiency to superior product quality — underscore their potential to redefine the standards of semiconductor fabrication. As the industry continues to evolve, embracing these innovations will be key to maintaining competitiveness and meeting the ever-increasing demands for smaller, faster, and more efficient electronic devices.

The future of high-k dielectric vaporization is a promising one, illuminated by the advancements discussed in this paper. It is an invitation to industry leaders, engineers, and researchers alike to embrace these breakthroughs, further refine them, and pave the way for a new era in semiconductor technology. The implementation of these cutting-edge solutions is not just a step forward in addressing current challenges but a stride towards shaping the future of the semiconductor industry.

9. Embrace Next-Generation Semiconductor Solutions

While this white paper has outlined the theoretical advantages of combining nanodroplet atomization with heat exchangers, the practical implementation of such a solution is at the forefront of technological evolution, and MSP™ is leading the charge.

MSP™, a Division of TSI®, is proud to introduce the Turbo II™ Vaporizer, the latest addition to our renowned Turbo™ Vaporizer lineup, launched at the start of 2024. Capitalizing on revolutionary technology, the Turbo II™ is specifically designed to overcome the intricate challenges of vaporizing High-k dielectrics, embodying the advantages of nanodroplet atomization integrated with heat exchangers.

By incorporating the Turbo II™ Vaporizer into your processes, users can expect unparalleled operational efficiency, heightened safety standards, superior product quality, and optimal resource utilization. To fully grasp how this state-of-the-art vaporizer can transform your vaporization processes, we invite you to explore the Turbo II™ alongside our full range of products at [MSPVaporizers](https://www.mspvaporizers.com).

Engage with MSP™ today, and let the Turbo II™ Vaporizer propel your operations into the future of High-k dielectric vaporization. Your journey towards operational excellence is just a click away.

All specifications are subject to change without notification.

The MSP logo is a registered trademark of MSP Corporation. TSI and the TSI logo are registered trademarks of TSI Incorporated.



MSP - Visit our website www.tsi.com/msp for more information.

5910 Rice Creek Parkway, Suite 300
Shoreview, Minnesota
55126, U.S.A.
Tel: 651.287.8100