






QUICK REFERENCE CARD FOR TSI SIDEPAK™ MODEL AM510 PERSONAL AEROSOL MONITOR

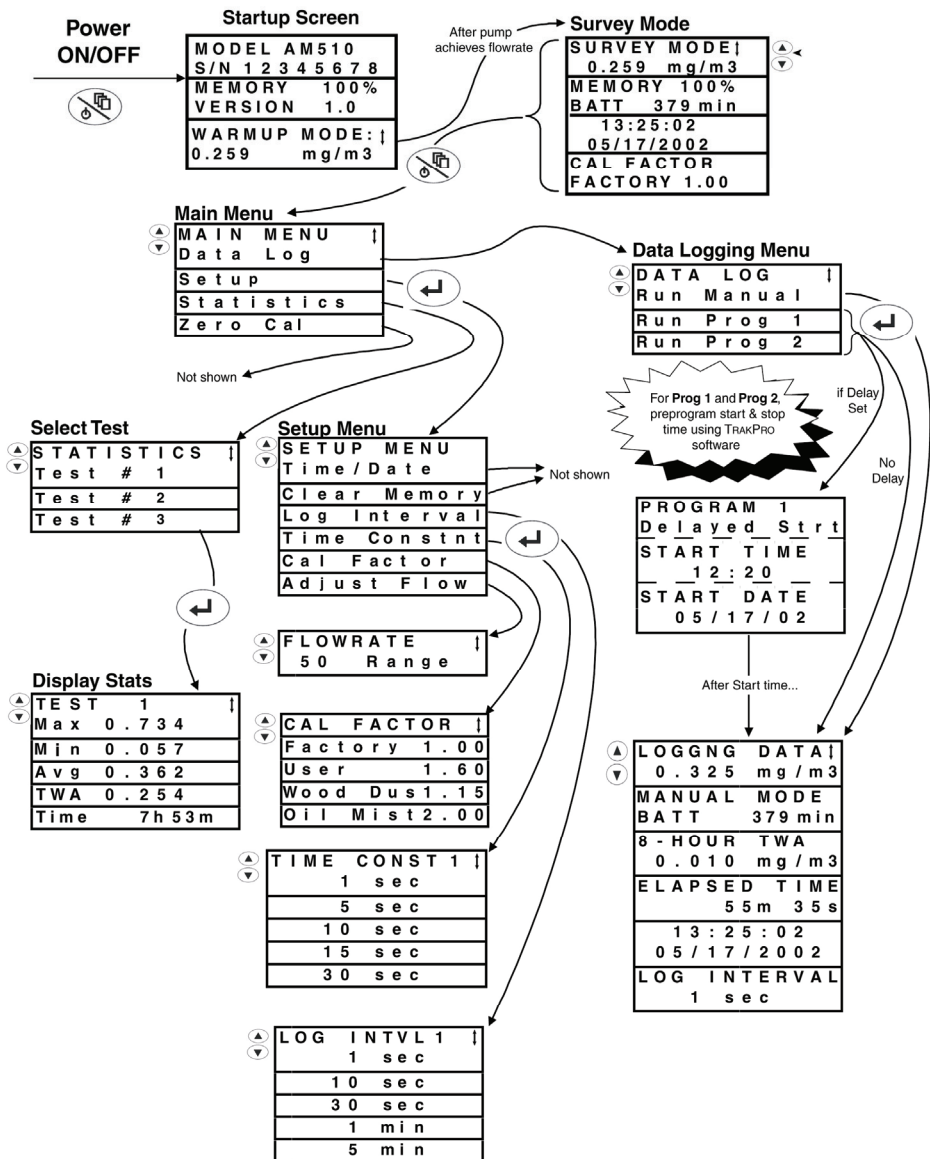

FRONT PANEL CONTROLS FOR SIDEPAK™ MONITOR

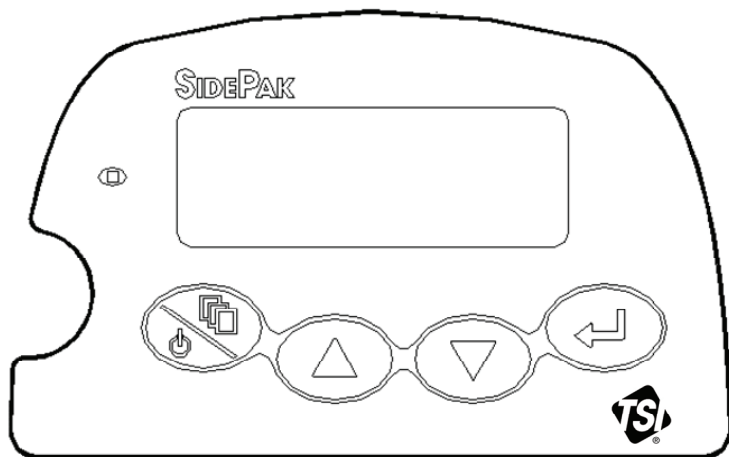

	<p>To turn the instrument ON, press the PAGE key.</p> <p>To turn the instrument OFF, press and hold the PAGE key for 3 seconds.</p> <p>Use the PAGE key to go back to the previous screen or menu.</p>
	<p>Use the ↵ key to execute selected menu options and confirm changes.</p>
	<p>Use the ▲ ▼ keys to scroll through vertical menus and to alter numeric values.</p>

Tamper protection: To toggle between an unlocked and locked keypad, press and hold the ▲ key and *then* press ↵. When the keypad is locked, the display shows **KEYPAD LOCK**.