

MITA MASK ADAPTER KIT MODEL 8125-01

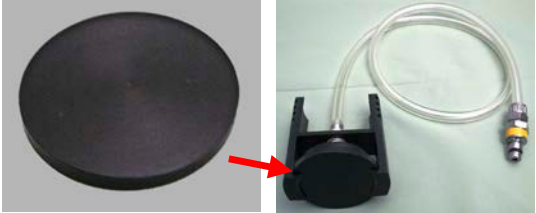
INSTRUCTION GUIDE



APPLICABLE MASK MODELS:
M40/FR-M40, M45, MCU-2/P AND MILLENNIUM



Included Accessories

Drink Tube (DT) Valve Adapter ➤ Installed on mask during DT Flow test	
40/74 mm Mask Filter Plug ➤ Installed on mask during Protection Factor test	
Exhalation Valve (EV) Adapter (for M40, FR-M40, MCU-2/P, and Millennium masks) ➤ Connect to Mask Exhalation Valve during EV Leak test	
Exhalation Valve (EV) Adapter (for M45 masks) ➤ Connect to Mask Exhalation Valve during EV Leak test	
EV Self Check Zero Fixture ➤ Connect to EV Adapter, during the EV Leak Zero Test option of the Self Checks procedure	

Note

The Exhalation Valve (EV) Leak Test is to be excluded from the M45 mask test protocol. The EV leak Test should be disabled and the EV Adapter, displayed above, should be in place during the Mask Protection Factor test.

Components Installed on Masks



Example of M40 / FR-M40



Example of M45



Example of MCU-2/P



Example of MILLENNIUM



UNDERSTANDING, ACCELERATED

TSI Incorporated – Visit our website www.tsi.com for more information.

USA Tel: +1 800 874 2811
UK Tel: +44 149 4 459200
France Tel: +33 4 91 11 87 64
Germany Tel: +49 241 523030

India Tel: +91 80 67877200
China Tel: +86 10 8219 7688
Singapore Tel: +65 6595 6388