


# NOISE INDICATOR NI-100

The Noise Indicator NI-100 alerts users to potentially dangerous noise levels, helping identify areas where further noise assessment or hearing protection may be needed. Users clip the device to a shirt or jacket and its LED light delivers a clear indicator when noise levels exceed a potentially hazardous threshold. Its small size and lightweight design make it ideal for workers in a variety of industries.



## Features and Benefits

- + Provides visual "Go/No Go" indication of noise levels below or above 85 dBA
- + Flashing green indicates noise level is below 85 dBA and flashing red indicates noise level is above 85 dBA and hearing protection may be needed
- + Simple one-button operation with a rechargeable battery
- + Small and lightweight
- + Clips to lapel or shirt pocket
- + Provides an affordable training tool for helping workers know when hearing protection may be required
- + Increase awareness of hearing conservation guidelines
- + Can be used as a mapping tool to qualify future noise studies

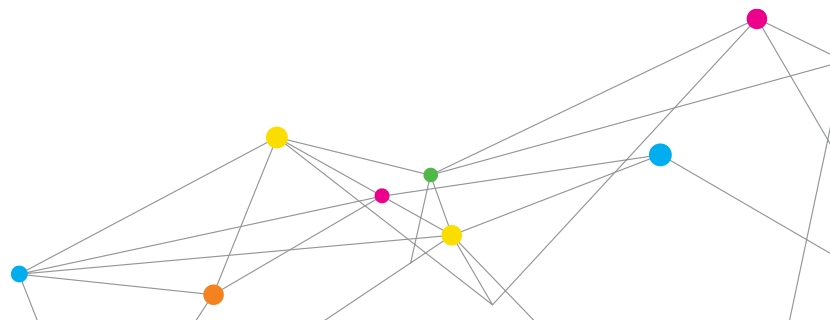

## SPECIFICATIONS


### NOISE INDICATOR NI-100

Size	2" (L) x 1.4" (W) x 0.5" (D) / 5.1 cm (L) x 3.6 cm (W) x 1.3 cm (D)
Weight	0.6 oz (17 g)
Temperature Operating/Storage	-14 to 122°F / -10 to 50°C
Humidity Range	0 to 95%; non-condensing
Accuracy	3 dB
Alert Level	Flashes red when >85 dBA Flashes green when <85 dBA
Battery	Li-Poly (flat cell)* with approximately 200 hours of operating before recharging
Battery Life	Approximately two years of charging cycles
Charging	A mini-USB cable (sold separately) plugs into bottom port of device
Auto-Power Off	The device will power off after approximately 10 hours

\*Not certified intrinsically safe

Specifications are subject to change without notice.

Quest is a trademark, and TSI and the TSI logo are registered trademarks of TSI Incorporated.

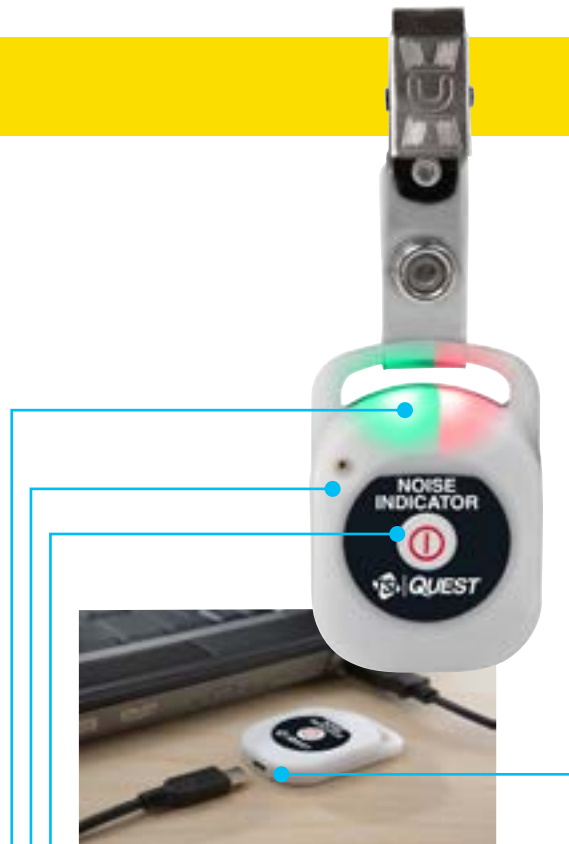

#### One-button operation

- + Simply clip to lapel and power-on
- + Easy for workers to use and understand

#### Small Size

- + Compact, lightweight design for increased hearing protection compliance

#### Visual "Go/No Go"

- + Green LED ("Go") flashes when noise level is below 85 dBA
- + Red LED ("No Go") flashes when noise level exceeds 85 dBA
- + Easy-to-understand visual indication when hearing protection may/may not be needed

#### Rechargeable battery

- + Provides up to 200 hours of use between charges
- + 10-hour auto-power off helps prolong battery life for extra cost savings



TSI Incorporated - Visit our website [www.tsi.com](http://www.tsi.com) for more information.

<b>USA</b>	<b>Tel:</b> +1 800 874 2811	<b>India</b>	<b>Tel:</b> +91 80 67877200
<b>UK</b>	<b>Tel:</b> +44 149 4 459200	<b>China</b>	<b>Tel:</b> +86 10 8219 7688
<b>France</b>	<b>Tel:</b> +33 1 41 19 21 99	<b>Singapore</b>	<b>Tel:</b> +65 6595 6388
<b>Germany</b>	<b>Tel:</b> +49 241 523030		