

Announcing Fit Test Card Printing for the PORTACOUNT® Plus Respirator Fit Tester

Fit Test Cards Improve Your Respirator Program and Help Protect Workers



Automatically print fit test cards with the new Model 8907 Card Printer Kit, new FitPlus™ v3 Fit Test Software and your PORTACOUNT Plus Respirator Fit Tester! When each worker carries an individualized fit test card, you can...

- Facilitate workplace respirator audits
- Confirm workers are using the correct mask
- Eliminate worker confusion about which mask to use
- Verify that worker's last fit test is current
- Ensure correct mask issue from stores
- Prevent issue of respirators to unqualified workers

The Model 8907 is rugged, reliable and easy to use. High-resolution (300 dpi) fit test cards print in less than 10 seconds!

FitPlus Software Automates Quantitative Respirator Fit Testing

FitPlus v3 Software together with the PORTACOUNT Plus is the ultimate fit test system for elastomeric and disposable respirators. The updated software prompts the

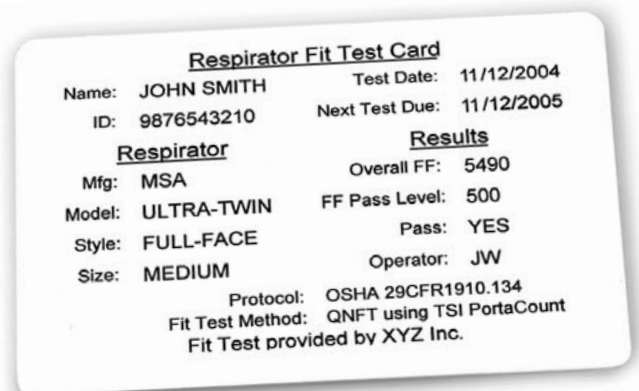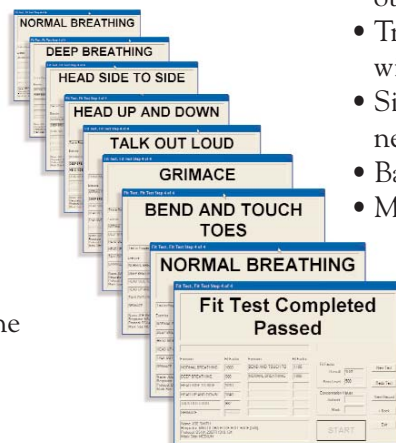

respirator wearer through the required exercise protocol, records the results in a database, prints reports and more. With FitPlus v3, you can...

- Automate fit testing, recordkeeping and reporting
- Comply with OSHA, ANSI, CSA, HSE or any other fit test regulation
- Train employees on correct respirator donning with Real-Time Fit Factor Display
- Simultaneously access databases from multiple networked installations
- Back up and restore fit test databases
- Much, much more!

Specifications

Model 8907 Card Printer

Manufacturer	Fargo Electronics
Card Size	3.375 in. × 2.125 in. (86 mm × 54 mm) CR-80
Card Input Hopper Capacity	100 cards (30 mil)
Card Output Hopper Capacity	30 cards (30 mil)
Colors	Up to 16.7 million ¹
Dimensions	7.0 in. H × 10.5 in. W × 7.5 in. D (178 mm H × 267 mm W × 190 mm D)
Computer Interface	USB 1.1 (USB 2.0 compatible)
Print Method	Dye-Sublimation/Resin Thermal Transfer
Print Speed	
Monochrome	7 seconds per card / 514 cards per hour (K)
Color	27 seconds per card / 133 cards per hour (YMCKO) ¹
Resolution	300 dpi (11.8 dots/mm)
Power Requirements	100-240 VAC Auto Sensing, 3.3 A, 50/60 Hz



Model 8907 Card Printer Kit

Includes everything you need to get started printing fit test cards with FitPlus v3 Fit Test Software and your PORTACOUNT Plus Respirator Fit Tester.

- Model 8907 Card Printer
- 500 Blank Cards
- Black Printer Ribbon
- USB Printer Cable
- Windows[®] Driver CD

Supplies

Part No.	Description
1204058	Black Ribbon for Model 8907 (Fargo DTC300), prints 1,000 cards
1204050	Box of 500 Blank Cards, PVC, White, 30 mil, CR-80

¹ FitPlus Software does not support color. Printer is shipped with black ribbon.
Windows is a registered trademark of Microsoft Corporation.



TSI Incorporated

Corporate Headquarters—Tel: 651 490 2811 **Toll Free:** 1 800 874 2811 **Fax:** 651 490 3824 **E-mail:** answers@tsi.com
Contact TSI or visit www.tsi.com for information on specific office locations worldwide.

